





If the following warning light comes on . . .












ILY77VA03a

Stop the vehicle immediately

| | | | |
|---|--|---|--|
|  | Brake system warning light (U.S.A.) |  | Low engine oil pressure warn- ing light |
|  | Brake system warning light (Canada) |  | Charging system warning light |

Have the vehicle inspected immediately

| | | | |
|---|--|---|---|
|  | Malfunction indicator lamp (U.S.A.) |  | ABS warning light (U.S.A.) |
|  | Malfunction indicator lamp (Canada) |  | ABS warning light (Canada) |
|  | SRS warning light |  | Adaptive front lighting system off indicator (When flashing) |
|  | Tire pressure warning light (Flashing and then continu- ously on) |  | Rear light failure warning light |
|  | VSC OFF indicator (When flashing) | | |

For further information, refer to the Owner's Manual.

Follow the correction procedures



Low engine oil level warning light



Low fuel level warning light



Driver's seat belt reminder warning light



Engine oil replacement reminder light (U.S.A.)



Open door warning light



Low washer fluid warning light



Front passenger's seat belt reminder warning light



Tire pressure warning light*
(Illuminate no flashing)

See the Owner's Manual



Turn signal indicator



Headlight high beam indicator



Headlight indicator (U.S.A.)



Tail light indicator (Canada)



Front fog light indicator



Shift position indicator



Shift range position indicator



ECT SNOW indicator



ECT PWR indicator



Cruise control indicator



VSC OFF indicator



Slip indicator



Adaptive front lighting system off indicator




Front passenger airbag on-off indicator

For further information, refer to the Owner's Manual.

*: Turns on due to natural causes such as natural air leaks or tire inflation pressure changes caused by temperature including the spare tire (excluding compact spare tire). Adjust the tire inflation pressure.

Location of Emergency Equipment

n Jack, tools, and spare tire

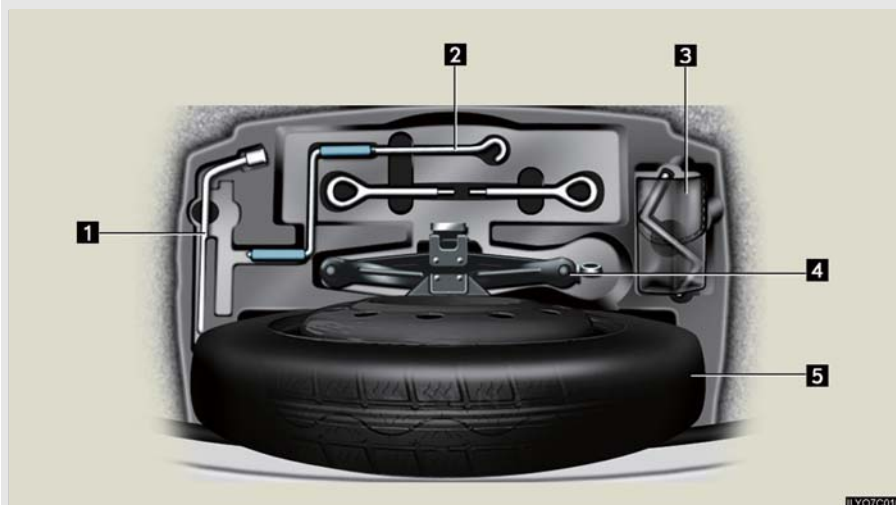


- 1 Wrench
- 2 Jack handle
- 3 Tool bag
- 4 Jack
- 5 Spare tire (if equipped)

Removing the spare tire



- 1 Remove the tire cover.
- 2 Loosen the bolt and remove the spare tire.

If the retractable hardtop does not close

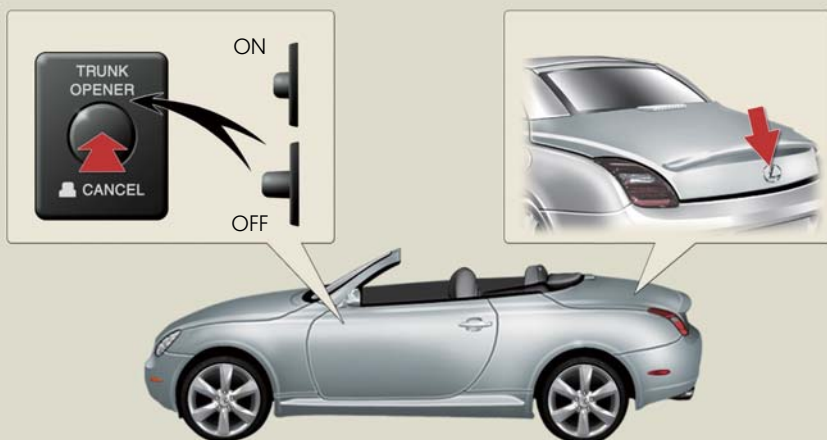

First, check the following:

Is the trunk lid opener main switch ON?

Is the trunk lid closed?

If the retractable hardtop still does not close, see the owner's manual for more information or contact your Lexus dealer.

If the engine (ignition) switch does not turn easily



Turn the engine switch while lightly moving the steering wheel from left to right.